


**The ez
Guide**

Model # UVC 3001

99.9% sterilizing rate

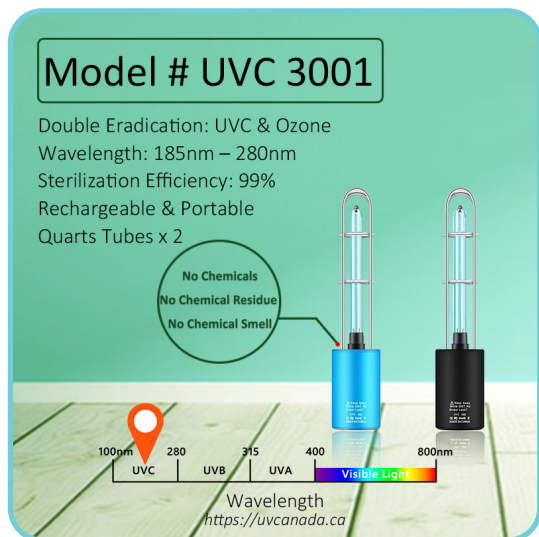

How to setup:

Step 1: Charge the UV Light Lamp for 1.5 hour before first use.

Step 2: Press and hold the power ON/OFF button for 3 seconds. blue light will indicate that the device is in standby mode.

Step 3: Your UV Light Lamp will automatically turn on and start working in the next 10 secs. This is the time to move away from the lamp

Step 4 The UV Light Lamp is equipped with a smart timer. It will auto shut-off after 15 minutes.

Step 5: You can also manually turn it off by pressing the ON/OFF switch.

Benefits

- UV-C and Ozone for double sterilization
- Eliminate odor
- Rechargeable light weight and easy to transport
- Fast acting and efficient sterilization, eliminate a variety of Pathogens
- Free from chemical agents
- Auto Stop Timer

Suggestions

- Note that the effectiveness of the UV light sterilization depends on having an uninterrupted line-of sight exposure.
- Place the UV Sterilizer within a particular line-of-sight that offers optimum results.
- Best Use: fridge, small cupboard, draw, cabinet, car, van, limos.
- Turn your shoe box into disinfection box to do cash, wallets, keys, masks, jewelry, watches, socks,
- headphones, toothbrushes, hearing aids, remotes, eye glasses

Caution and Warnings

- Avoid exposure to UV rays, it can be harmful to the eyes and skin
- This equipment is intended for indoor use only
- Do not alter the device.
- Do not use this Lamp for other than its intended purpose, as described in suggestions
- Equipment should be protected from the elements and from temperatures below freezing
- Do not operate the UV Lamp if any damage to the unit is visible or suspected.

Maintenance

Keep the UV Tube clean you can gentle wipe it with soft cloth