


**The ez
Guide**

Model # UVC 3013

How to setup:

99.9% sterilizing rate

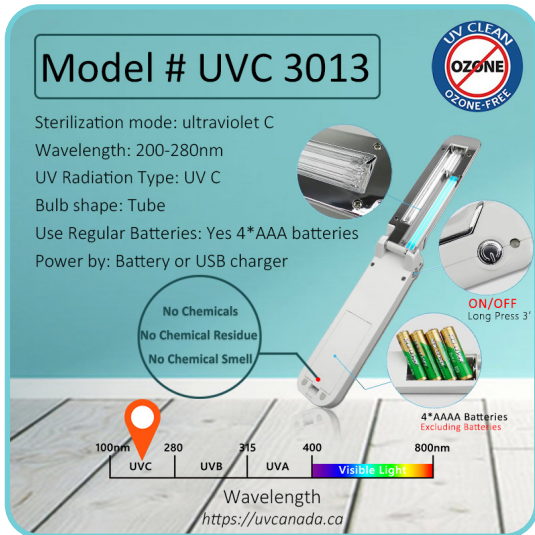

Step 1: Slide and open the battery compartment to Install 4 x AAA batteries not included.

Step 2: To turn power ON press on the silver button once the blue LED indicator will turn on, open the UV light and will come on.

Step 3: slowly move UV light 2 to 4 inches over any surface you want to sterilization repeat this 5 to 6 times or for 10 to 20 seconds.

Step 4: To turn off the device press the silver power button again.

Benefits

- Unique security feature auto shut off when UV light faces up
- Fast acting and efficient 99.9% sterilization
- UV-C Disinfection technology
- Sterilization without use of harmful chemicals that leave residue.
- Added advantage Works with 4 x AA batteries.
- Light weight and easy to carry around

Suggestions

- Note that the effectiveness of UV disinfection depends on having an uninterrupted line-of-sight exposure.
- Disinfect phones all house hold items like bedding/mattress, kitchen utensils, personal
- hygiene items, counters, bathroom fixtures, office desk computers keyboards, retail shops can use to disinfect display counters merchandise. kids toys, pet toys, laundry, Phone, cash, wallets, keys, masks, jewelry, watches, socks, headphones, toothbrushes, remotes, eye glasses, makeup brush, hair brush, hearing aids & more

Caution and Warnings

- Do not directly look at UV light when sanitization is in progress.
- Avoid exposure to UV rays, it can be harmful to the eyes and skin
- This equipment is intended for indoor use only
- Do not alter the device.
- Do not use this Lamp for other than its intended purpose, as described in suggestions
- Equipment should be protected from the elements and from temperatures below freezing
- Do not operate the UV Lamp if any damage to the unit is visible or suspected.

Maintenance

Keep the UV device clean you can gentle wipe it with soft cloth