


**The ez
Guide**

Model # UVC 3014

How to setup:

99.9% sterilizing rate

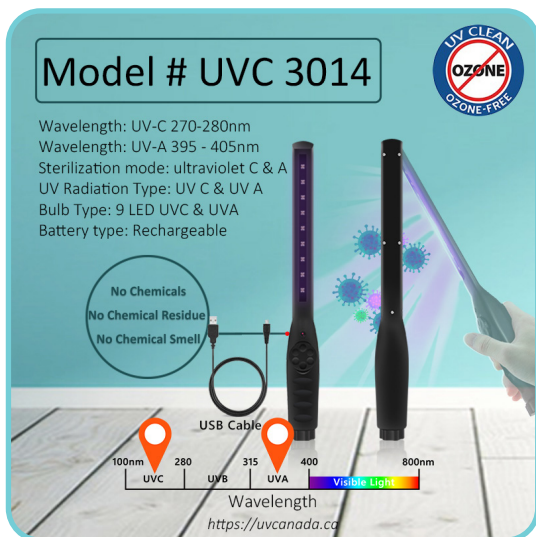

Step 1: Insert USB cable in the charging port and charge unit, red light indicates that unit is charged and green light indicates unit is fully charged.

Step 2: Turn the rotary switch clockwise the UV light will turn ON

Step 3: Slowly move the sterilization light from a distance of 3/5 cm over the desired surface for 6 to 12 seconds repeat 2 to 3 times for best results.

Step 4: Turn the rotary switch counter clockwise to turn OFF

Benefits

- 9 Led for power and speed
- High power – Industrial /Commercial /Offices
- Fast acting and efficient 99.9% sterilization
- Eliminate a variety of Pathogens
- Sterilization without use of harmful chemicals that leave residue.
- Light weight and easy to transport
- Portable and rechargeable

Suggestions

- Note that the effectiveness of UV disinfection depends on having an uninterrupted line-of-sight exposure.
- Disinfect all house hold items like, bedding/mattress, kitchen utensils, personal hygiene items, counters, bathroom fixtures, office desk computers keyboards, retail shops can use to disinfect display counters , merchandise, Phone, cash, wallets, keys, masks, jewelry, watches, socks, headphones, toothbrushes, remotes, eye glasses, makeup brush, hair brush, hearing aids

Caution and Warnings

- Do not directly look at UV light when sanitization is in progress.
- Avoid exposure to UV rays, it can be harmful to the eyes and skin
- This equipment is intended for indoor use only
- Do not alter the device.
- Do not use this Lamp for other than its intended purpose, as described in suggestions
- Equipment should be protected from the elements and from temperatures below freezing
- Do not operate the UV Lamp if any damage to the unit is visible or suspected.

Maintenance

Keep the UV wand clean you can gentle wipe it with soft cloth