


**The ez  
Guide**

**Model # UVC 3017**

**How to setup:**

**99.9% sterilizing rate**

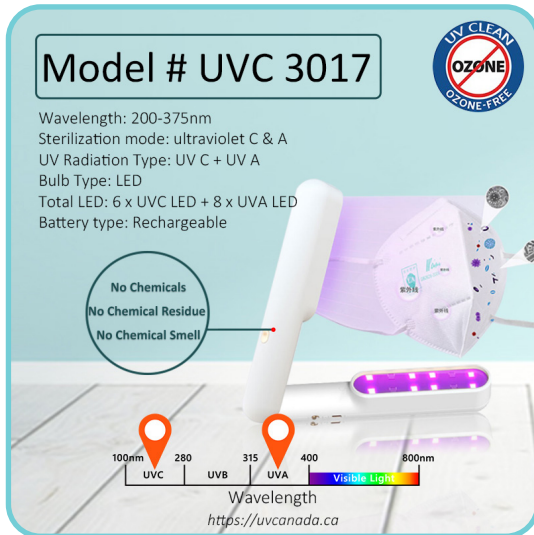

**Step 1:** Charge the UV Light Lamp for 2 to 3 hour before first use.

**Step 2:** Slide the master button on side of the unit to ON position the unit goes in Standby mode.

**Step 3:** Press on the power ON/OFF touch button on top of device to activate device.

**Step 4:** slowly move UV light over any surface you want to sterilization repeat this 5 to 6 times

**Step 5:** This UV Light Lamp is equipped with a smart timer. It will auto shut-off after 180 seconds.

**Step 6:** You can also manually turn it off by pressing the ON/OFF touch button or sliding the master switch to OFF position

**Benefits**

- 12 Led for power and speed of eradication
- High power – Industrial /Commercial /Offices
- Fast acting and efficient 99.9% sterilization
- Eliminate a variety of Pathogens
- Sterilization without use of harmful chemicals that leave residue.
- Rechargeable batteries USB charging
- Light weight and easy to carry

**Suggestions**

- Note that the effectiveness of UV disinfection depends on having an uninterrupted line-of-sight exposure.
- Disinfect mobile phone, keys, masks, jewelry, watches, socks, headphones, toothbrushes makeup brushes, remotes bedding/mattress, kitchen utensils, personal hygiene items, counters, bathroom fixtures, office desk computers keyboards, retail shops can use to disinfect display counters and merchandise

**Caution and Warnings**

- Do not directly look at UV light when sanitization is in progress.
- Avoid exposure to UV rays, it can be harmful to the eyes and skin
- This equipment is intended for indoor use only
- Do not alter the device.
- Do not use this Lamp for other than its intended purpose, as described in suggestions
- Equipment should be protected from the elements and from temperatures below freezing
- Do not operate the UV Lamp if any damage to the unit is visible or suspected.

**Maintenance**

Keep the UV wand clean you can gentle wipe it with soft cloth