


**The ez
Guide**

Model # UVC 3025

How to setup:

99.9% sterilizing rate

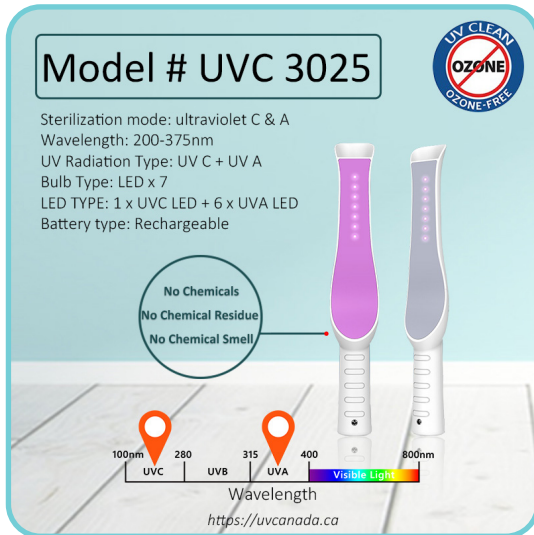

Step 1: Charge the UV Light Lamp for 2 to 3 hour before first use.

Step 2: Slide the master button on side of the unit to ON position the unit goes in Standby mode.

Step 3: Press on the power ON/OFF touch button on top of device to activate device.

Step 4: Allowly move UV light 2 to 5 inches over any surface you want to sterilization repeat this 5 to 6 times

Step 5: You can also manually turn it off by pressing the ON/OFF touch button or sliding the master switch to OFF position

Benefits

- Led for speed and power
- Fast acting and efficient 99.9% sterilization
- Eliminate a variety of Pathogens
- Sterilization without use of harmful chemicals that leave residue.
- Built In Rechargeable batteries and USB charging
- Light weight and easy to transport
- Ozone-Free

Suggestions

- Disinfect mobile phone, keys, masks, jewelry, watches, socks, headphones, toothbrushes makeup brushes, remotes bedding/mattress, kitchen utensils, personal hygiene items, counters, bathroom fixtures, office desk computers keyboards, retail shops can use to disinfect display counters & merchandise

Caution and Warnings

- Do not look at the light source with naked eye; avoid light from falling on skin
- Avoid exposure to UV rays, it can be harmful to the eyes and skin
- This equipment is intended for indoor use only
- Do not alter the device.
- Do not use this Lamp for other than its intended purpose, as described in suggestions
- Equipment should be protected from the elements and from temperatures below freezing
- Do not operate the UV Lamp if any damage to the unit is visible or suspected.

Maintenance

Keep the UV Tube clean you can gentle wipe it with soft cloth