


**The ez
Guide**

Model # UVC 3028

How to setup:

99.9% sterilizing rate

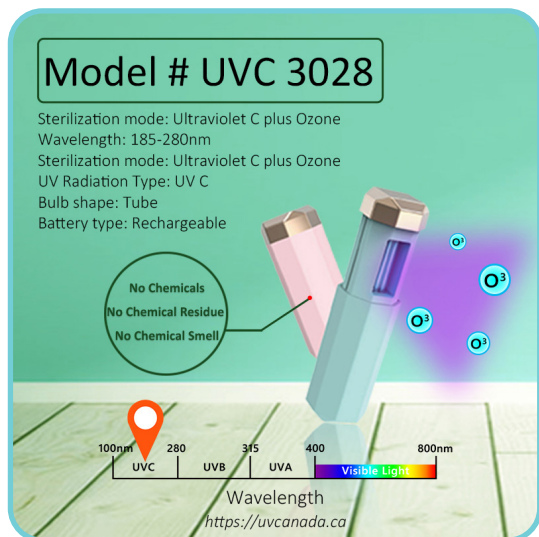

Step 1: Charge the unit through the charging port located on the side of the unit for 2 hours before first use

Step 2: Gently lift the top of unit

Step 3: Press and hold the switch for 1 seconds to turn on the unit

Step 4: Leave it to a place for eradication

Note: It can kill bacteria by irradiating the object surface within a short distance for 2 minutes

Step 5: Press switch again to turn off the unit

Note: The unit will automatically turn off after 2 minutes

*** Please note:** Make sure the unit is always charged before eradication

Benefits

- UV-C and Ozone for double sterilization
- Eliminate a variety of Pathogens
- Free from chemical agents
- Disinfects surfaces from germs within a short period of time
- Ozone-helps eliminate odors

Suggestions

- Note that the effectiveness of the UV light sterilization depends on having an uninterrupted line-of sight exposure.
- Place the UV Sterilizer within a particular line-of-sight that offers optimum results.
- Best Use: Phone, cash, wallets, keys, masks, jewelry, watches, socks, headphones, toothbrushes, hearing aids, remotes, eye glasses, Leave it in fridge, small cupboard, draw, cabinet, shoe box, 2 minutes. Do twice for a car.

Caution and Warnings

- Do not look at the light source with naked eye; avoid light from falling on skin
- Do not breath Ozone, always ventilate area before entering area that was purified/sanitized with Ozone
- Avoid exposure to UV rays, it can be harmful to the eyes and skin
- Do not use this Sterilizer for other than its intended purpose, as described in suggestions
- Equipment should be protected from the elements and from temperatures below freezing
- Do not operate the UV Sterilizer if any damage to the unit is visible or suspected
- Do not alter the device

Maintenance

Keep the UV Sterilizer clean you can gentle wipe it with soft cloth