


The ez Guide **Model # UVC 3030**

99.9% sterilizing rate

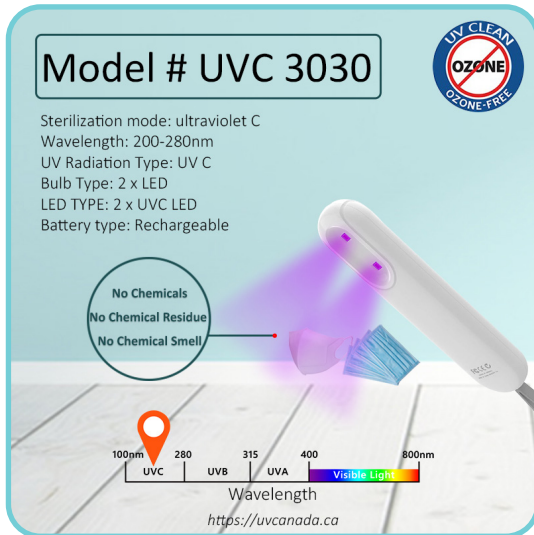

How to setup:

Step 1: Charge the unit through the charging port located on the right of the unit for 2 hours before first use

Step 2: Press and hold the power button located on top of the unit to turn on

Step 3: Scan the area with light turned on; the closer it is, the faster eradication takes place

Step 4: Press and hold the power button located on top of the unit again to turn off

*** Please note:** Make sure the unit is always charged before eradication

Benefits

- No harsh chemicals
- Light and Compact, User-friendly
- 2 x UV-C LED for fast effective results
- Sterilization in confined spaces such as bedrooms, hotel rooms, bathrooms, kitchens, vehicles and other places that present a high risk of cross-infection
- Ozone-Free

Suggestions

- Note that the effectiveness of the UV light sterilization depends on having an uninterrupted line-of sight exposure.
- Place the UV Sterilizer within a particular line-of-sight that offers optimum results.
- Best Use: Phone, cash, wallets, keys, masks, jewelry, watches, socks, headphones, toothbrushes, hearing aids, remotes, eye glasses & more

Caution and Warnings

- Do not look at the light source with naked eye; avoid light from falling on skin
- Avoid exposure to UV rays, it can be harmful to the eyes and skin
- Do not use this Sterilizer for other than its intended purpose, as described in suggestions
- Equipment should be protected from the elements and from temperatures below freezing
- Do not operate the UV Sterilizer if any damage to the unit is visible or suspected
- Do not alter the device
- This equipment is intended for indoor use only

Maintenance

Keep the UV Sterilizer clean you can gentle wipe it with soft cloth