


The ez
Guide

Model # UVC 3046

How to setup:

99.9% sterilizing rate

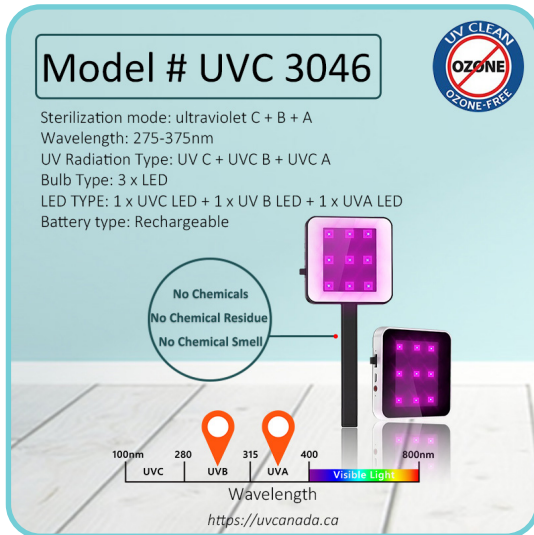

Step 1: Plug in the charging wire through the charging port located on the side of the unit for 2 hours before use

Dual mode guide:

Always On Mode: For walking around to eradicate object surface

Step 2: Attach the white wand (stick) to the side of the lamp

Step 3: Switch the power button located on the right side of the charging port to the right ("A") to turn on the light at all times

Step 4: Walk around with lamp and scan the areas for eradication
Motion Censor Mode: For placing on a surface to eradicate its surroundings

Step 2: Attach the magnetic sticker to the back of the UV lamp

Step 3: Peel of the yellow sticker

Step 4: Switch the power button located on the right side of the charging port to the left ("M") to turn on the light only in certain circumstances

Note: the UV lamp will begin its eradication process when no light reflects on the light censor

Note: To check if Manual Mode functions properly, simply cover the light censor located on the left of the charging port (Small circle) with your thumb. The UV lamp should light up when its covered

Step 5: Leave the unit to a place for eradication

Please note: Make sure the unit is always charged before eradication

Step 3: Press the power button located on the side to turn on the UV light for disinfection

Note: Press the power button once will last for 15 minutes, twice for 25 minutes, and 3 times to turn off

Step 4: Press the power button 3 times to turn off the unit

Benefits

- UV C + B + A LED sterilization lamp
- 9 UV Led Total
- Sterilization in confined spaces
- Free from chemical agents
- Magnet back, motion & light sensor, extension rod
- Rechargeable lithium battery
- Ozone-Free

Suggestions

- Note that the effectiveness of the UV light sterilization depends on having an uninterrupted line-of-sight exposure.
- Place the UV Sterilizer within a particular line-of-sight that offers optimum results.
- Best Use: fridge, small cupboard, draw, cabinet, car, van, limos.
- Turn your shoe box into disinfection box to do cash, wallets, keys, masks, jewelry, watches, socks, headphones, toothbrushes, hearing aids, remotes, eye glasses

Caution and Warnings

- Do not look at the light source with naked eye; avoid light from falling on skin
- Avoid exposure to UV rays, it can be harmful to the eyes and skin
- Do not use this Gadget for other than its intended purpose, as described in suggestions
- Equipment should be protected from the elements and from temperatures below freezing
- Do not operate the UV Gadget if any damage to the unit is visible or suspected
- Do not alter the device
- This equipment is intended for indoor use only

Maintenance

Keep the UV Gadget clean you can gentle wipe it with soft cloth