


**The ez  
Guide**

**Model # UVC 3072**

**99.9% sterilizing rate**

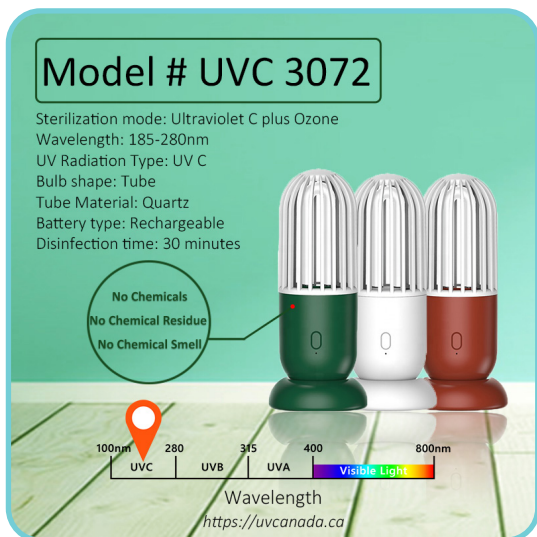

**How to setup:**

**Step 1:** Charge the product through the charging port for 2-3 hours before first use

**Step 2:** Plug in charging wire into the charging port located in front of the unit

**Step 3:** Press and hold the power button (Green Button) for 3 seconds and wait for 30 seconds for the unit to be turned on

**Note:** The switch indicator located below the power button will also turn blue when the unit is turned on

**Step 4:** Leave the unit to a place for eradication

**Step 5:** Press the power button again to turn off the unit

**Note:** The unit will automatically turn off after 30 minutes

**Benefits**

- UV-C and Ozone for double sterilization
- Eliminate odor
- Rechargeable light weight and easy to transport
- Fast acting and efficient sterilization, eliminate a variety of Pathogens in seconds
- Free from chemical agents
- Auto Stop Timer

**Suggestions**

- Note that the effectiveness of the UV light sterilization depends on having an uninterrupted line-of-sight exposure.
- Place the UV Sterilizer within a particular line-of-sight that offers optimum results.
- Best Use: fridge, small cupboard, draw, cabinet, car, van, limos. Turn your shoe box into disinfection box to do cash, wallets, keys, masks, jewelry, watches, socks, headphones, toothbrushes, hearing aids, remotes, eye glasses

**Caution and Warnings**

- Do not look at the light source with naked eye; avoid light from falling on skin
- Do not breath Ozone, always ventilate area before entering area that was purified/sanitized with Ozone
- Avoid exposure to UV rays, it can be harmful to the eyes and skin
- Do not use this Lamp for other than its intended purpose, as described in suggestions
- Equipment should be protected from the elements and from temperatures below freezing
- Do not operate the UV Lamp if any damage to the unit is visible or suspected
- Do not alter the device

**Maintenance**

Keep the UV Lamp clean you can gentle wipe it with soft cloth