


The ez Guide **Model # UVC 3080**

99.9% sterilizing rate

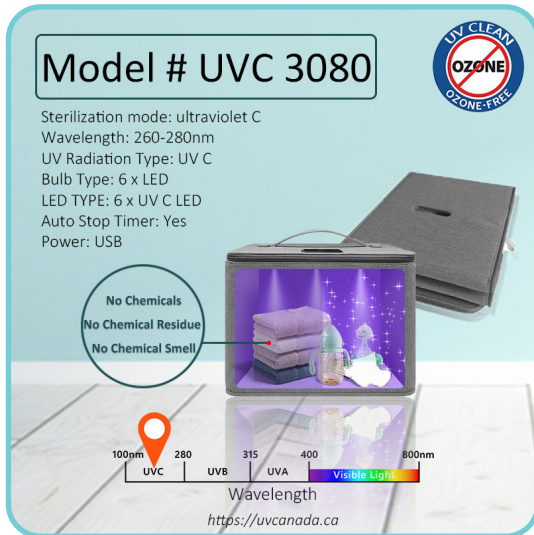

How to setup:

Step 1: Unfold the folded disinfection package.

Step 2: Put the item on the bracket (the items should be laid flat, not stacked) and pull up the zipper (the zipper has magnetic induction, which can be effectively opened for sterilization only when it is fully pulled in place).

Step 3: Connect the power supply and click the disinfection key to start automation disinfection. The disinfection time is 5 minutes (Close automatically after 5 minutes, do not press the start key repeatedly).

Step 4: After disinfection, the indicator light goes out and the object can be taken out.

Benefits

- Folding Portable high quality material
- Fast and effective UV-C disinfection
- User-friendly
- Eliminate bacteria and viruses 99.9% Clean
- Fill it with everything that fit in
- Auto Stop Timer

Suggestions

- Baby Stuff, Lingerie, take out lunch, grocery, DJ stuff, makeup brushes, barber tools and anything that you can fit in.

Caution and Warnings

- Do not look at the light source with naked eye; avoid light from falling on skin
- Do not breath Ozone, always ventilate area before entering area that was purified/sanitized with Ozone
- Avoid exposure to UV rays, it can be harmful to the eyes and skin
- Do not use this Box for other than its intended purpose, as described in suggestions
- Equipment should be protected from the elements and from temperatures below freezing
- Do not operate the UV Box if any damage to the unit is visible or suspected
- Do not alter the device

Maintenance

Keep the UV Box clean you can gentle wipe it with soft cloth