


**The ez
Guide**

Model # UVC 3082

How to setup:

99.9% sterilizing rate

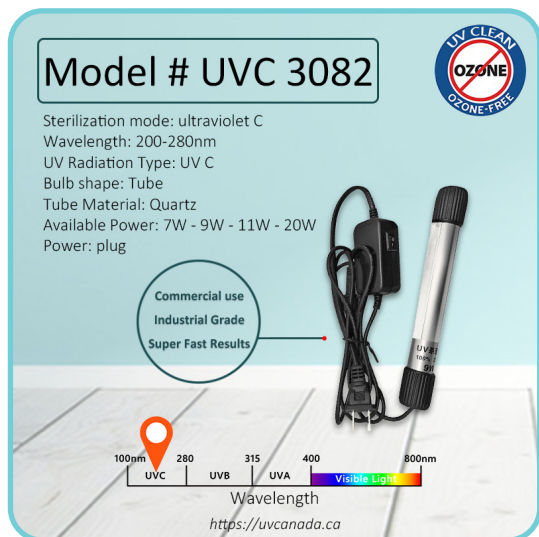

Step 1: Plug lamp to power, turn “ON” lamp with the silver coated side of the tube facing towards you

Step 2: Slowly pass over the object/surface 2 to 3 times from a distance of 2 to 4 inches for 3 to 5 seconds. Or from 6 to 8 inch for 6 to 12 seconds you can also leave/hang it in a room/closet/washroom.

Sterilization time - 30 minutes if hang Wand in a room/closet/washroom.

09W: Disinfection range: 100 sq ft

11W: Disinfection range: 120 sq ft

20W: Disinfection range: 220 sq ft

Slowly pass Wand over object 2 to 5 times from a distance of 2 to 8 inches for 3 to 12 seconds. depending on the power of lamp

Benefits

- Eliminate a variety of Pathogens and Inactivates bacteria using UV-C light
- Disinfects surfaces from germs within seconds, depending on the distance
- Industrial use very fast
- Free from chemical agents
- Ozone-Free

Suggestions

- Note that the effectiveness of the UV Air purification also depends on having an uninterrupted line-of-sight exposure.
- Place the UV Lamp within a particular line-of-sight that offers optimum results.
- hang it in Bathrooms, Laundry Room, Linen Closets, Kitchen Cabinets, Smoke Room, Shed, Vehicles, Prayer Room, Fridge, Shoe Cabinet, Cottages, Houseboat, boats etc, or Scan any surface

Caution and Warnings

- Do not look at the light source with naked eye; avoid light from falling on skin
- Avoid exposure to UV rays, it can be harmful to the eyes and skin
- This equipment is intended for indoor use only
- Do not alter the device.
- Do not use this Lamp for other than its intended purpose, as described in suggestions
- Equipment should be protected from the elements and from temperatures below freezing
- Do not operate the UV Lamp if any damage to the unit is visible or suspected.

Maintenance

Keep the UV Lamp clean you can gently wipe it with soft cloth